


Quick Start Guide






10/28/52-Port Gigabit Web-Smart Pro Switches


ECS2100-10T/ECS2100-10P/ECS2100-10PE

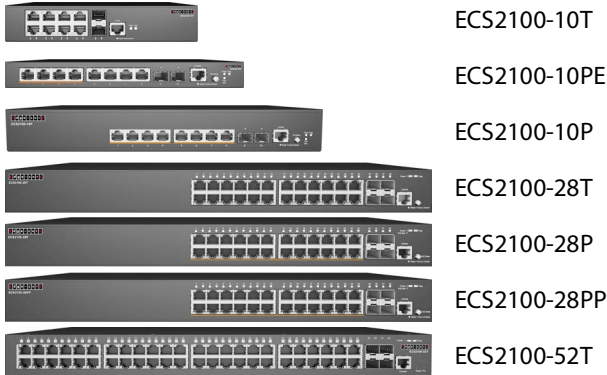ECS2100-28T/ECS2100-28P/ECS2100-28PP/ECS2100-52T

1. Unpack the Device and Check Contents




-  Rack Mounting Kit—two brackets and eight screws
-  Four adhesive foot pads
-  Power Cord—either Japan, US, Continental Europe or UK
-  Console Cable—RJ-45 to DB-9 (Optional item)
-  Documentation—*Quick Start Guide* (this document) and *Safety and Regulatory Information*


-  **Note:** The ECS2100 series devices are for indoor use only.
- Note:** For Safety and Regulatory information, refer to the Safety and Regulatory Information document included with the device.
- Note:** Other documentation, including the Installation Guide, Web Management Guide, and CLI Reference Guide, can be obtained from www.edge-core.com.


2. Mount the Device

a. Mounting in a Rack

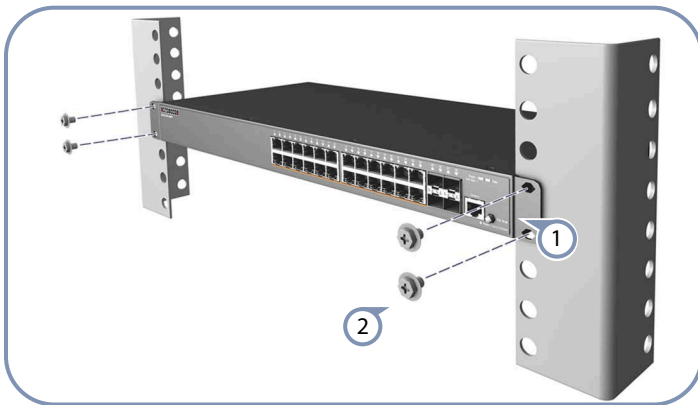



- 1 Attach the brackets to the device.
- 2 Use the screws and cage nuts supplied with the rack to secure the device in the rack.

 **Caution:** Installing the device in a rack requires two people. One person should position the device in the rack, while the other secures it using the rack screws.
Attention: Deux personnes sont nécessaires pour installer un commutateur dans un bâti: La première personne va positionner le commutateur dans le bâti, la seconde va le fixer avec des vis de montage.

 **Note:** The device can also be installed on a desktop or shelf using the included adhesive rubber foot pads.


b. Mounting in a Rack (ECS2100-10PE only)

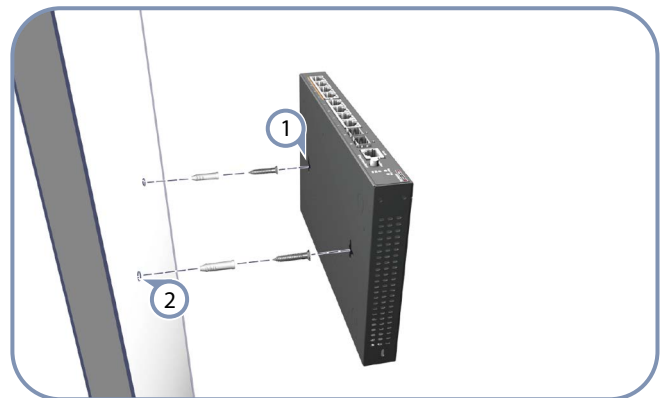

 **Caution:** For safe operation, install the device with RJ-45 ports facing up.
Attention: Pour un fonctionnement sûr, installez le commutateur avec les ports RJ-45 orientés vers le haut.

- 1 Set two screws in the wall 150 mm (5.9 in.) apart.
- 2 Slide the device's wall mounting slots down onto the screws so that the unit is secure.

3. Ground the Device

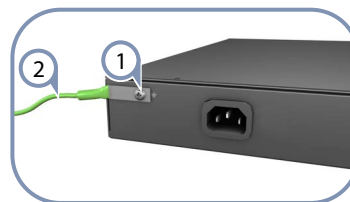

- 1 Ensure the rack on which the device is to be mounted is properly grounded and in compliance with ETSI ETS 300 253. Verify that there is a good electrical connection to the grounding point on the rack (no paint or isolating surface treatment).
- 2 Attach a lug (not provided) to a #12 AWG (PoE device) or #18 AWG (non-PoE device) minimum grounding wire (not provided), and connect it to the grounding point on the device rear panel. Then connect the other end of the wire to rack ground.





Caution: The earth connection must not be removed unless all supply connections have been disconnected.


Attention: Le raccordement à la terre ne doit pas être retiré sauf si toutes les connexions d'alimentation ont été débranchées.

Caution: The device must be installed in a restricted-access location. It should have a separate protective earthing terminal on the chassis that must be permanently connected to earth to adequately ground the chassis and protect the operator from electrical hazards.

Attention: L'appareil doit être installé dans un emplacement à accès restreint. Il doit comporter une borne de terre de protection distincte sur le châssis, qui doit être connectée en permanence à la terre pour assurer une mise à la terre adéquate du châssis et protéger l'opérateur des risques électriques.

4. Connect Power

a. Connect AC Power

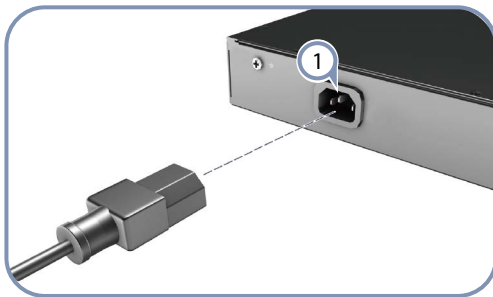

- 1 Plug the AC power cord into the socket on the rear of the device.
- 2 Connect the other end of the power cord to an AC power source. Verify that the external AC power requirements for the device can be met as listed below:
 ECS2100-10T: AC 100-240 V, 50-60 Hz, 0.5 A
 ECS2100-10P: AC 100-240 V, 50-60 Hz, 2.1 A
 ECS2100-28T: AC 100-240 V, 50-60 Hz, 0.5 A (Not for China), AC 100-240 V, 50/60 Hz, 0.5 A
 ECS2100-28P: AC 100-240 V, 50-60 Hz, 3.2 A
 ECS2100-28PP: AC 100-240 V, 50-60 Hz, 5.8 A
 ECS2100-52T: AC 100-240 V, 50/60 Hz, 1 A




Warning: For the ECS2100-10P, the bottom of the enclosure is a hot surface. Do not touch!

Attention: Pour l'ECS2100-10P, le bas du boîtier est une surface chaude. Ne pas toucher!



Note: For International use, you may need to change the AC line cord. You must use a line cord set that has been approved for the socket type in your country.

b. Connect DC Power to ECS2100-10PE

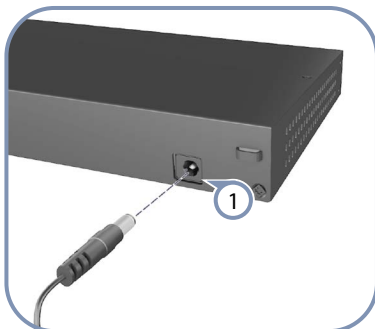

Note: The ECS2100-10PE includes an AC-DC power adapter. Connect the AC-DC power adapter to the device and to an AC power source. The AC-DC adapter provides 54 VDC, 1.67 A of power to the device.



1 Plug the DC power cable into the socket on the rear of the device.




2 Plug the AC-DC power adapter into a nearby AC power outlet.

5. Verify Device Operation



1 Verify basic device operation by checking the system LEDs. When operating normally, the Power and Diag LEDs should be on green.

6. Perform Initial Configuration

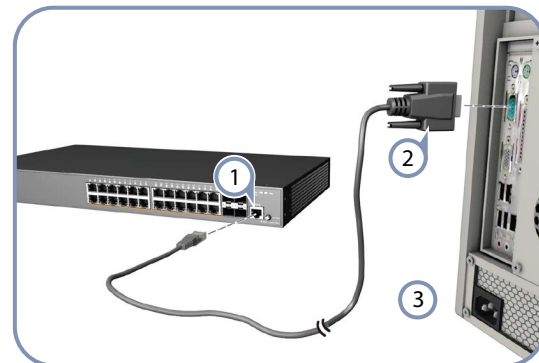

1 Connect a PC to the device console port using the included console cable.



2 Configure the PC's serial port: 115200 bps, 8 characters, no parity, one stop bit, 8 data bits, and no flow control.




3 Log in to the CLI using default settings: Username "admin" and password "admin."



Note: For further information on device configuration, refer to the *Web Management Guide* and *CLI Reference Guide*.

7. Connect Network Cables

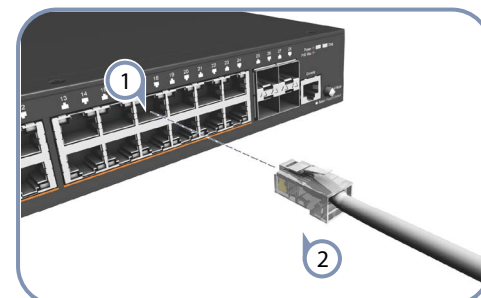

- 1 For RJ-45 ports, connect 100-ohm Category 5, 5e or better twisted-pair cable.
- 2 For the SFP/SFP+ slots, first install SFP/SFP+ transceivers and then connect fiber optic cabling to the transceiver ports. The following transceivers are supported:
 - ◆ 1000BASE-SX (ET4201-SX)
 - ◆ 1000BASE-LX (ET4201-LX)
 - ◆ 1000BASE-ZX (ET4201-ZX)
 - ◆ 1000BASE-LHX (ET4201-LHX)
 - ◆ 10GBASE-SR (ET5402-SR)
 - ◆ 10GBASE-LR (ET5402-LR)
 - ◆ 10GBASE-ER (ET5402-ER)
- 3 As connections are made, check the port status LEDs to be sure the links are valid. Press the Mode button to change from Ethernet to PoE status:
 - ◆ On/Blinking Green — Port has a valid link. Blinking indicates network activity.
 - ◆ On Amber — Port is supplying PoE power.

8. Hardware Stacking Connection (Optional)



- 1 Install the ECS2100-28PP in a standard 19-inch rack and power on.
- 2 Install the PS3000 chassis in a standard 19-inch rack.
- 3 Install one or more EPS460W PSUs in the chassis. The chassis can support up to three EPS460W PSUs.
- 4 Use the PSU cable (provided) to connect each EPS460W PSU to an ECS2100-28PP device.
- 5 Connect the AC power cord to power on the EPS460W PSU, and check the LEDs on the PSUs to ensure proper operation. The Link LEDs for connected devices should light up.

Hardware Specifications

Device Chassis

Size (W x D x H)	ECS2100-10T: 19.64 x 11.71 x 3.66 cm (7.73 x 4.61 x 1.44 in.) ECS2100-10P: 33.0 x 20.4 x 4.26 cm (12.99 x 8.03 x 1.67 in.) ECS2100-10PE: 24.0 x 15.5 x 2.65 cm (9.44 x 6.10 x 1.04 in.) ECS2100-28T/28P/28PP/52T: 44 x 22 x 4.4 cm (17.32 x 8.66 x 1.73 in.)
Weight	ECS2100-10T: 816 g (1.8 lb) ECS2100-10P: 2.4 kg (5.34 lb) ECS2100-10PE: 973 g (2.15 lb) ECS2100-28T: 2.2 kg (4.86 lb) ECS2100-28P: 2.8 kg (6.18 lb) ECS2100-28PP: 3.1 kg (6.85 lb) ECS2100-52T: 2.5 kg (5.5 lb)

Temperature	Operating: 0 °C to 50 °C (32 °F to 122 °F) Operating: 0 °C to 45 °C (32 °F to 113 °F, ECS2100-28PP only) Operating: 0 °C to 40 °C (32 °F to 104 °F, ECS2100-10P and ECS2100-28PP with one EPS460W only) Storage: -40 °C to 70 °C (-40 °F to 158 °F)
-------------	--

Humidity	Operating: 10% to 90% (non-condensing)
----------	--

Power Specification

AC Input Power	ECS2100-10T: AC 100-240 V, 50-60 Hz, 0.5 A ECS2100-10P: AC 100-240 V, 50-60 Hz, 2.1 A ECS2100-28T: AC 100-240 V, 50-60 Hz, 0.5 A (Not for China), AC 100-240 V, 50/60 Hz, 0.5 A ECS2100-28P: AC 100-240 V, 50-60 Hz, 3.2 A ECS2100-28PP: AC 100-240 V, 50-60 Hz, 5.8 A ECS2100-52T: AC 100-240 V, 50/60 Hz, 1 A
----------------	--

AC-DC Power Adapter (ECS2100-10PE only)	Input: AC 100-240 V, 50-60 Hz, 1 A Output: 54 VDC, 1.67A
---	---

Total Power Consumption	ECS2100-10T: 8 W ECS2100-10P: 160 W ECS2100-10PE: 80 W ECS2100-28T: 20 W ECS2100-28P: 260 W ECS2100-28PP: 490 W ECS2100-28PP+ one extended power supply: 950 W ECS2100-52T: 40 W
-------------------------	---

Regulatory Compliances

Emissions	CE Mark <ul style="list-style-type: none"> ◆ EN 55032 Class A EN IEC 61000-3-2 Class A EN 61000-3-3 FCC Class A CCC GB 9254-2008 Class A BSMI CNS 15936, Class A
Immunity	EN 55035 IEC 61000-4-2/3/4/5/6/11
Safety	UL/CUL (UL 62368-1, 2nd Ed & CAN/CSA C22.2 No. 62368-1-14, 2nd Edition) CB (IEC/EN 62368-1) BSMI CNS15598-1


快速入门指南

10/28/52端口智慧型交换机

ECS2100-10T/ECS2100-10P/ECS2100-10PE

ECS2100-28T/ECS2100-28P/ECS2100-28PP/ECS2100-52T

1. 产品包装内容

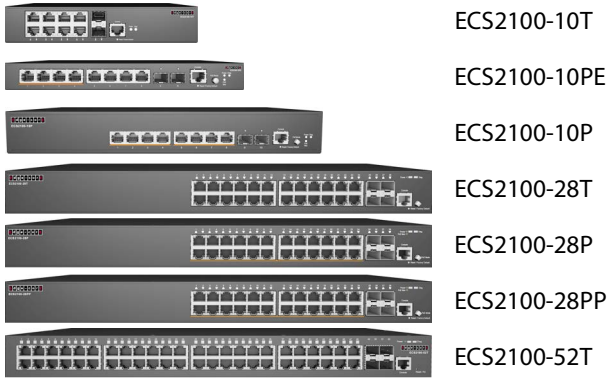

安装套件 — 2 个支架和 8 个螺钉



四个粘合型支脚垫



电源线 — 美规、欧规或英规



控制台线缆 — RJ-45 至 DB-9



文档 — 快速入门指南（本文档）以及安全与法规信息




注意： ECS2100 系列设备仅供室内使用。

注意： 有关安全与法规信息，请参阅设备随附的《Safety and Regulatory Information- 安全与法规信息》文件。

注意： 说明文件 - 包含安装指南、Web 管理指南及 CLI 参考指南可以从 www.edge-core.com 下载。

2. 安装设备

a. 在机架中安装

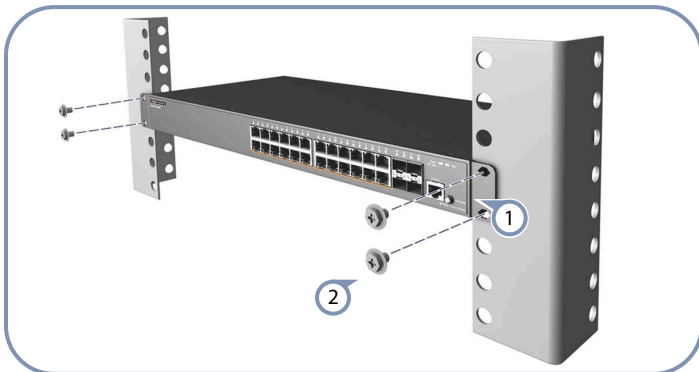

- ① 将支架安装到设备前面。
- ② 使用机架随附的螺丝和卡式螺母，将设备固定到支架上。




小心： 将此设备安装在机架中时需要两个人。一个人将设备放置在机架中，同时另一个人用机架螺丝将其固定。



注意： 也可以使用附带的粘合型支脚垫将设备安装到桌面或搁架上。


b. 壁挂 (仅适用 ECS2100-10PE)

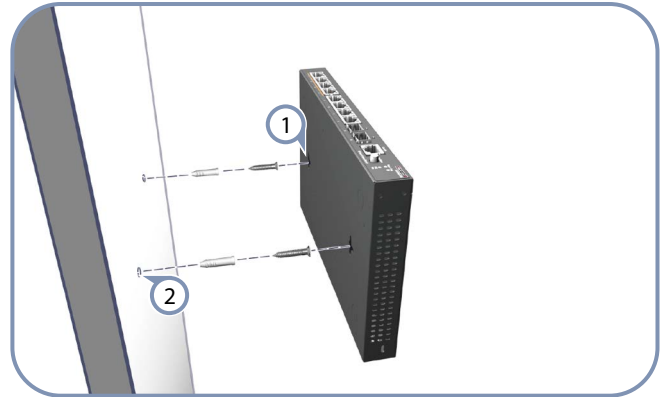

小心： 建议 RJ-45 口须朝上或朝下以增加散热效果。

- ① 在墙上标示水平两点距离为 15 公分 (5.9 英寸)，将螺丝锁入。
- ② 将交换器滑入至螺丝位置并固定住。

3. 将设备接地

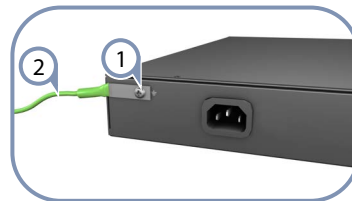

- ① 确保要安装设备的机架已正确接地，并且符合 ETSI ETS 300 253 规范。确认到机架上接地点的电力连接良好（未经过油漆或绝缘表面处理）。
- ② 连接 # 12 AWG (PoE 设备) 或 # 18 AWG (非 PoE 设备) 之最小接地线（未随附），一端接至设备，另一端接到机架地面。




小心：必须在所有电源连接都断开的情况下，才能移除接地连接。

小心：必须将设备安装在限制访问位置。机箱上应该有单独的保护接地端子，该端子必须永久连接到地上以使机箱完全接地，防止操作人员发生触电危险。

4. 连接电源

a. 交流电源

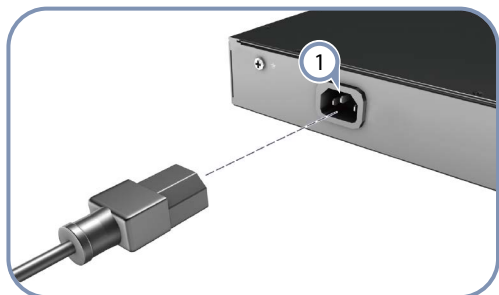

- ① 将 AC 电源线插入背板 AC 电源孔。
- ② 连接 AC 电源到交换机电源插孔，各型号电源规格如下：
ECS2100-10T: AC 100-240 V, 50-60 Hz, 0.5 A
ECS2100-10P: AC 100-240 V, 50-60 Hz, 2.1 A
ECS2100-28T: AC 100-240 V, 50-60 Hz, 0.5 A 不适用于中国, AC 100-240 V, 50/60 Hz, 0.5 A
ECS2100-28P: AC 100-240 V, 50-60 Hz, 3.2 A
ECS2100-28PP: AC 100-240 V, 50-60 Hz, 5.8 A
ECS2100-52T: AC 100-240 V, 50/60 Hz, 1 A




警告：在连接 DC 电源至交换机前，务必接上接地线。



注意：请使用符合当地电源规格且经检验合格的电源线，以符合各国的安全规范。

b. 连接 DC 电源至 ECS2100-10PE

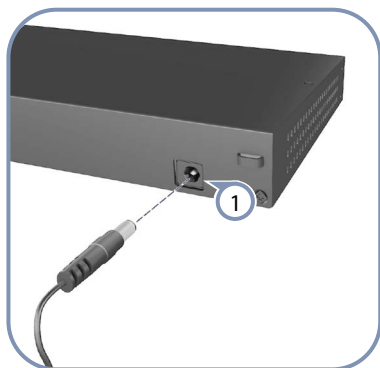

注意：ECS2100-10PE 包含了 AC-DC 电源适配器，连接 AC-DC 电源适配器至设备 AC 端，此 AC-DC 适配器提供 54VDC, 1.67A 的电源至设备。


- ① 将 DC 电源线插入背板 AC 电源孔。
- ② 再将 AC-DC 电源接头插入附近 AC 电源。

5. 检查设备运行




- ① 通过系统 LED 检查设备的基本运行。正常工作时，Power 以及 Diag LED 应亮起绿色

6. 执行初始配置

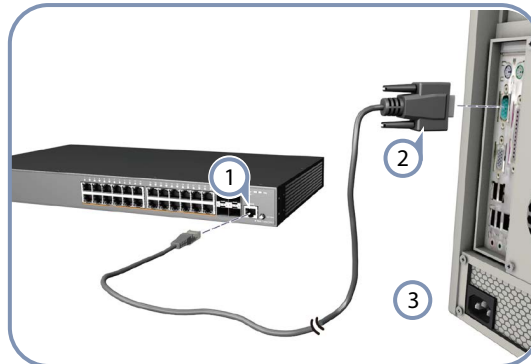

- ① 使用附带的控制台线将 PC 连接到设备控制台端口。
 - ② 配置 PC 的串行端口：115200 bps，8 个字符，无奇偶校验，一个停止位，8 个数据位，无流程控制。
 - ③ 使用默认设置登录 CLI：用户名“admin”和密码“admin”。
- 注意：**有关设备配置的详情，请参考 Web 管理指南和 CLI 参考指南。

7. 连接网线

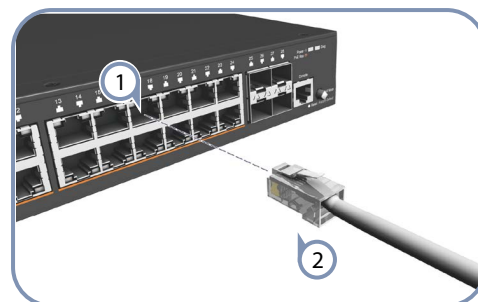

- ① 对于 RJ-45 端口，连接 100-ohm Category 5、5e 或双绞线更好。
- ② 对于 SFP/SFP+ 槽，先安装 SFP/SFP+ 收发器，再将光纤连接到收发器端口。
支持下列收发器：
 - ◆ 1000BASE-SX (ET4201-SX)
 - ◆ 1000BASE-LX (ET4201-LX)
 - ◆ 1000BASE-ZX (ET4201-ZX)
 - ◆ 1000BASE-LHX (ET4201-LHX)
 - ◆ 10GBASE-SR (ET5402-SR)
 - ◆ 10GBASE-LR (ET5402-LR)
 - ◆ 10GBASE-ER (ET5402-ER)

- ③ 建立连接后，检查端口状态 LED，确保连接正常。按模式按钮从以太网更改为 PoE 状态：
- ◆ 开机 / 闪烁绿色 — 端口具有有效连接。闪烁表示网络活动。
 - ◆ 琥珀色 — 端口正在进行 PoE 供电。

8. 硬件堆叠连接 (选购)



- ① 安装 ECS2100-28PP 在 19 英寸机架上，并确定 ECS2100-28PP 已经开机运作。
- ② 安装 PS3000 (电源扩充架) 在 19 英寸机架上。
- ③ 将 EPS460W 安装在 PS3000 上，PS3000 可以支持最多 3 个 EPS460W。
- ④ 使用随机附上的连接线连接 EPS460W 与 ECS2100-28PP。
- ⑤ 连接 EPS460W 电源，看到 EPS460W 电源灯已经亮起，表示已经开始供电。

硬件规格

设备机箱

尺寸 (W x D x H) ECS2100-10T: 19.64 x 11.71 x 3.66 cm (7.73 x 4.61 x 1.44 英寸)
 ECS2100-10P: 33.0 x 20.4 x 4.26 cm (12.99 x 8.03 x 1.67 英寸)
 ECS2100-10PE: 24.0 x 15.5 x 2.65 cm (9.44 x 6.10 x 1.04 英寸)
 ECS2100-28T/28P/28PP/52T: 44 x 22 x 4.4 cm (17.32 x 8.66 x 1.73 英寸)

重量 ECS2100-10T: 816 g (1.8 磅)
 ECS2100-10P: 2.4 kg (5.34 磅)
 ECS2100-10PE: 973 g (2.15 磅)
 ECS2100-28T: 2.2 kg (4.86 磅)
 ECS2100-28P: 2.8 kg (6.18 磅)
 ECS2100-28PP: 3.1 kg (6.85 磅)
 ECS2100-52T: 2.5 kg (5.5 磅)

温度 工作时: 0° C to 50° C (32° F to 122° F)
 工作时: 0° C to 45° C (32° F to 113° F, 仅 ECS2100-28PP 机种)
 工作时: 0° C to 40° C (32° F to 104° F, 仅 ECS2100-10P 以及 ECS2100-28PP 一个外接电源供应器 EPS460W)
 存放时: -40° C to 70° C (-40° F to 158° F)

湿度 工作时: 10% 到 90% (无冷凝)

电源规格

AC 输入电源 ECS2100-10T: AC 100-240 V, 50-60 Hz, 0.5 A
 ECS2100-10P: AC 100-240 V, 50-60 Hz, 2.1 A
 AC 100-240 V, 50-60 Hz, 0.5 A 不适用于中国, AC 100-240 V, 50/60 Hz, 0.5 A
 ECS2100-28P: AC 100-240 V, 50-60 Hz, 3.2 A
 ECS2100-28PP: AC 100-240 V, 50-60 Hz, 5.8 A
 ECS2100-52T: AC 100-240 V, 50/60 Hz, 1 A

AC-DC 电源供应器 (ECS2100-10PE) 输入: AC 100-240 V, 50-60 Hz, 1 A
 输出: 54 VDC, 1.67 A

耗电量 ECS2100-10T: 8 W
 ECS2100-10P: 160 W
 ECS2100-10PE: 80 W
 ECS2100-28T: 20 W
 ECS2100-28P: 260 W
 ECS2100-28PP: 490 W
 ECS2100-28PP 一个外接电源供应器: 950 W
 ECS2100-52T: 40 W

管制符合性

辐射 CE Mark
 ◆ EN 55032 A级
 EN IEC 61000-3-2 A级
 EN 61000-3-3
 FCC A级
 CCC GB 9254-2008 A级
 BSMI CNS 15936, A级

抗干扰性 EN 55035
 IEC 61000-4-2/3/4/5/6/11

安全 UL/CUL (UL 62368-1, 2nd Ed & CAN/CSA C22.2 No. 62368-1-14, 2nd Edition)
 CB (IEC/EN 62368-1)
 BSMI CNS15598-1


快速入門指南

10/28/52埠智慧型交換器

ECS2100-10T/ECS2100-10P/ECS2100-10PE

ECS2100-28T/ECS2100-28P/ECS2100-28PP/ECS2100-52T

1. 拆開設備包裝並檢查內容物

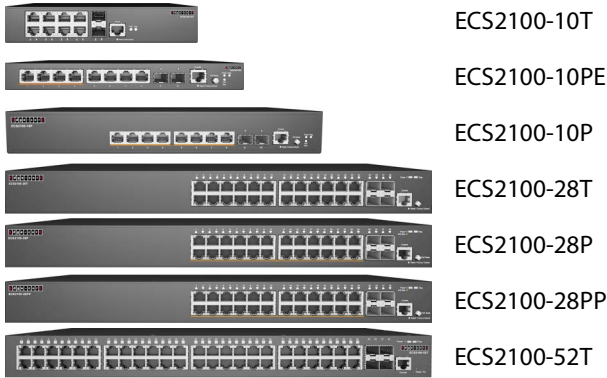

機架安裝套件包含 2 個擴充托架、8 個用於固定托架與設備的螺絲



4 個自黏腳墊



電源線—美規、歐規或英規



控制電纜—RJ-45 轉 DB-9




文件—快速入門指南（本文件）及安全性與法規資訊



注意：ECS2100 系列設備僅供室內使用。
 注意：有關安全與法規資訊，請參閱設備隨附的《Safety and Regulatory Information - 安全與法規資訊》
 注意：說明文件 - 包含安裝指南、Web 管理指南及 CLI 參考指南可從 www.edge-core.com 下載。

2. 安裝設備

a. 安裝於托架上

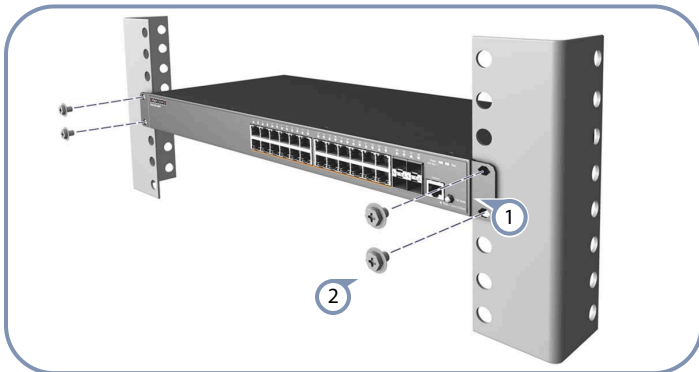

- ① 將擴充托架安裝於設備上。
- ② 使用隨機櫃提供的螺絲和固定螺母，將設備固定在機櫃上。




警告：需要兩個人，將設備裝到機櫃上。一人負責固定設備在機櫃上之位置，另一人負責用機櫃螺絲固定。



注意：也可以使用附帶的橡膠腳墊安裝在桌面或架上。


壁掛（僅適用於 ECS2100-10PE）

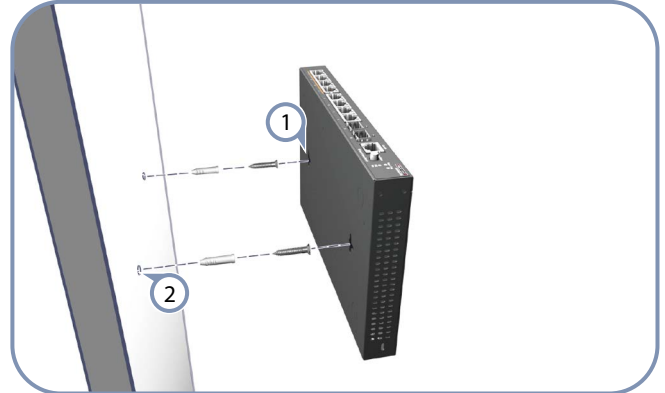

小心：建議 RJ-45 口須朝上或朝下以增加散熱效果。

- ① 在牆上標示水平兩點距離為 15 公分（5.9 吋），將螺絲鎖入。
- ② 將設備滑入至螺絲位置並固定住。

3. 連接接地線

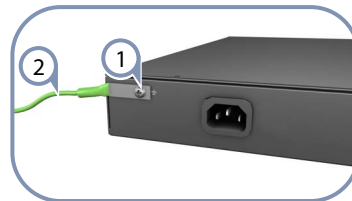


- ① 請確保對機架正確實施接地，並確保符合 ETSI ETS 300 253。請確認機架上的接地點的電氣導通狀態良好（確保沒有油漆或絕緣表面處理）。
- ② 將 12 號 AWG 接地線（PoE 設備）或 18 號 AWG 接地線（非 PoE 設備）連接至設備背面面板上的接地點上。然後將接地線的另一端連接至機架的接地。



小心：接地線在電源尚未切斷前請勿移除。
 小心：設備必須安裝在受限訪問位置。機箱上應有一個單獨的保護接地端子，必須永久連接到地面，以充分地接地底盤，並保護操作人員免受電氣危害。

4. 連接電源

a. 交流電源

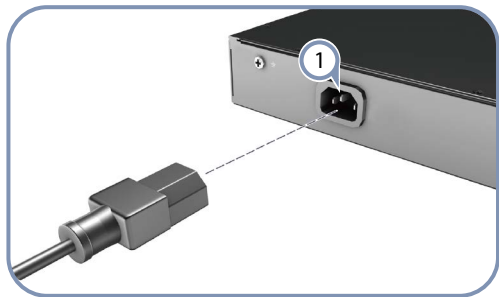

- ① 將 AC 電源線插入背板 AC 電源孔。
- ② 連接 AC 電源到設備電源插孔，各型號電源規格如下：
 ECS2100-10T: AC 100-240 V, 50-60 Hz, 0.5 A
 ECS2100-10P: AC 100-240 V, 50-60 Hz, 2.1 A
 ECS2100-28T: AC 100-240 V, 50-60 Hz, 0.5 A 不適用於中國，
 AC 100-240 V, 50/60 Hz, 0.5 A
 ECS2100-28P: AC 100-240 V, 50-60 Hz, 3.2 A
 ECS2100-28PP: AC 100-240 V, 50-60 Hz, 5.8 A
 ECS2100-52T: AC100-240 V, 50/60 Hz, 1 A




警告：在連接 AC 電源至設備前，務必接上接地線。



注意：需跨國使用時，您可能需要更換 AC 電源線。您必須使用所在國家 / 地區核准之插座類型的線纜組。

b. 連接 DC 電源至 ECS2100-10PE

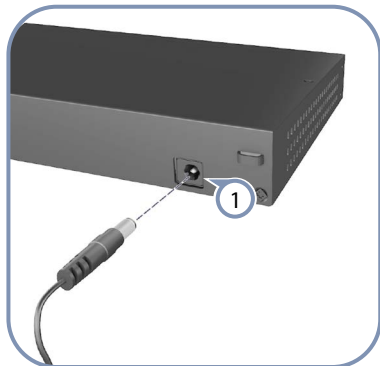

注意：ECS2100-10PE 包含了 AC-DC 電源供應器，連接 AC-DC 電源供應器至設備 AC 端，此 AC-DC 適配器提供 54VDC，1.67A 的電源至設備。


- ① 將 DC 電源線插入背板 AC 電源孔。
- ② 再將 AC-DC 電源接頭插入附近 AC 電源。

5. 確認設備運作




- ① 檢查 Diag LED，確認基本設備運作。正常運作時，診斷及電源 LED 應該同時亮起綠色。

6. 初始設定

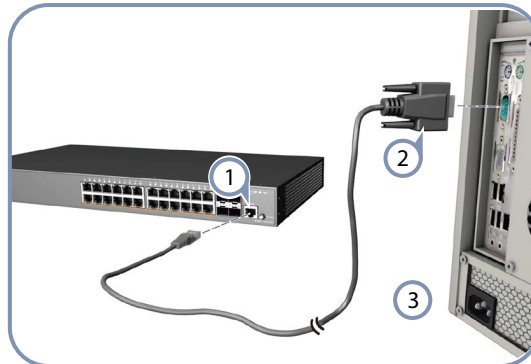

- ① 使用隨附的控制電纜連接 PC 與設備。
 - ② 設定序列埠的如下：115200 bps、8 個字元、無同位檢查、1 個停止位元、8 個資料位元且無流量控制。
 - ③ 您可使用預設設定（使用者為「admin」，密碼為「admin」）登入命令列介面（CLI）。
- 注意：**有關更多初始化設定，請參考 Web 管理指南以及 CLI 參考指南。

7. 連接網路線

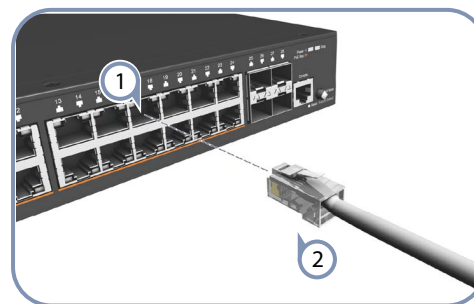

- ① 對於 RJ-45 連接埠，請使用 100-ohm Category 5、5e 以上等級的雙絞線。
- ② 對於 SFP/SFP+ 埠，先安裝 SFP/SFP+ 收發器，再將光纖線連接至收發器連接埠，支持下列收發器：
 - ◆ 1000BASE-SX (ET4201-SX)
 - ◆ 1000BASE-LX (ET4201-LX)
 - ◆ 1000BASE-ZX (ET4201-ZX)
 - ◆ 1000BASE-LHX (ET4201-LHX)
 - ◆ 10GBASE-SR (ET5402-SR)
 - ◆ 10GBASE-LR (ET5402-LR)
 - ◆ 10GBASE-ER (ET5402-ER)

- 3 完成連接線，檢查連接埠狀態 LED，確保連結有效。
按模式按鍵從乙太網更改成 PoE 模式：
- ◆ 開機 / 閃爍綠燈 — 有效連接。燈號閃略表示網路正在運作中。
 - ◆ 琥珀色 – 端口正在進行 PoE 供電。

8. (選購) 擴充 PoE 電源功率至 740 W



- 1 安裝 ECS2100-28PP 在 19 吋機架上，並確定 ECS2100-28PP 已經開機運作。
- 2 安裝 PS3000 (電源擴充架) 在 19 吋機架上。
- 3 將 EPS460W 安裝至 PS3000 上，PS3000 可以支援最多 3 個 EPS460W。
- 4 使用隨機附上的連接線連接 EPS460W 與 ECS2100-28PP。
- 5 連接 EPS460W 電源，看到 EPS460W 電源燈已經亮起，表示已經開始供電。

硬體規格

機殼規格

尺寸 (W x D x H)	ECS2100-10T: 19.64 x 11.71 x 3.66 cm (7.73 x 4.61 x 1.44 吋) ECS2100-10P: 33.0 x 20.4 x 4.26 cm (12.99 x 8.03 x 1.67 吋) ECS2100-10PE: 24.0 x 15.5 x 2.65 cm (9.44 x 6.10 x 1.04 吋) ECS2100-28T/28P/28PP/52T: 44 x 22 x 4.4 cm (17.32 x 8.66 x 1.73 吋)
重量	ECS2100-10T: 816 g (1.8 lb) ECS2100-10P: 2.4 kg (5.34 lb) ECS2100-10PE: 973 g (2.15 lb) ECS2100-28T: 2.2 kg (4.86 lb) ECS2100-28P: 2.8 kg (6.18 lb) ECS2100-28PP: 3.1 kg (6.85 lb) ECS2100-52T: 2.5 kg (5.5 lb)
溫度	操作: 0°C 至 50°C (32°F 至 122°F) 操作: 0°C 至 45°C (32°F 至 113°F, 僅 ECS2100-28PP) 操作: 0°C 至 40°C (32°F 至 104°F, 僅 ECS2100-10P 及 ECS2100-28PP 搭配一組 EPS460W) 儲存: -40°C 至 70°C (-40°F 至 158°F)
濕度	操作: 10% to 90% (無冷凝)

電源規格

AC 輸入電源	ECS2100-10T: AC 100-240 V, 50-60 Hz, 0.5 A ECS2100-10P: AC 100-240 V, 50-60 Hz, 2.1 A ECS2100-28T: AC 100-240 V, 50-60 Hz, 0.5 A 不適用於中國, AC 100-240 V, 50/60 Hz, 0.5 A ECS2100-28P: AC 100-240 V, 50-60 Hz, 3.2 A ECS2100-28PP: AC 100-240 V, 50-60 Hz, 5.8 A ECS2100-52T: AC 100-240 V, 50/60 Hz, 1A
---------	--

AC-DC 電源供應器 (ECS2100-10PE)

輸入: AC 100-240 V, 50-60 Hz, 1 A
輸出: 54 VDC, 1.67A

耗電量	ECS2100-10T: 8 W ECS2100-10P: 160 W ECS2100-10PE: 80 W ECS2100-28T: 20 W ECS2100-28P: 260 W ECS2100-28PP: 490 W ECS2100-28PP+EPS460W: 950 W ECS2100-52T: 40 W
-----	--

法規符合性

CE Mark	◆ EN 55032 A級
發射	EN IEC 61000-3-2 A級 EN 61000-3-3 FCC A級 CCC GB 9254-2008 A級 BSMI CNS 15936, A級
抗擾性	EN 55035 IEC 61000-4-2/3/4/5/6/11
安全性	UL/CUL (UL 62368-1, 2nd Ed & CAN/CSA C22.2 No. 62368-1-14, 2nd Edition) CB (IEC/EN 62368-1) BSMI CNS15598-1